



Hints and Tips when Considering an Eco Angus Wood Burning Boiler

Positioning

- The boiler and accumulator tank are typically located in a boiler room, an outhouse, a lean to, a garage, a utility room or a cellar.
- The ideal area for the installation would be a minimum of 3m wide x 3m deep x 2.5m high.
- Ideally the location of the boiler and accumulator tank would be within a maximum of 50 meters of the property/properties you are intending to heat.

Typical Eco Angus customer

A typical wood burning boiler owner is likely to:

- Have free or economic access to wood
- Have space for a boiler and tank in an appropriate location
- Have space for wood storage
- Be switching from oil/LPG/electricity to wood
- Be someone who is happy to accept the lifestyle aspect of running a log boiler
- Be someone happy with a manually loaded boiler
- Be someone happy to stack wood in a log shed
- Consider back up heating and/or hot water